

KEY POLYMER

For Wood Truck and Trailer Floors

KEY FP 100 A/B

TOUGH-SEAL™ TRP



# CrackFiller

A Key Polymer Product

For Industrial Use Only

Kevlar is a registered Dupont trademark.

KEVLAR® REINFORCED • EASILY REPAIRS GOUGES  
• SEALS CRACKS DURABLE • WON'T POP OUT



A Key Polymer Product

TOUGH-SEAL™ TRP  
THE ORIGINAL  
**FloorRestore®**  
A Key Polymer Product

TOUGH-SEAL™ TRP  
**SmoothMove**  
A Key Polymer Product

TOUGH-SEAL™ TRP  
**CrackFiller**  
A Key Polymer Product

TOUGH-SEAL™ TRP  
**SlipStop**  
A Key Polymer Product

TOUGH-SEAL™ TRP  
**QuickPatch**  
A Key Polymer Product

KEY POLYMER • 17 Shepard Street • Lawrence, MA 01843 • 978.683.9411 • [keypolymer.com](http://keypolymer.com)

Do it right! Watch the installation video at  
[keypolymer.com](http://keypolymer.com)

For additional safety information refer to Safety Data Sheets on our Website



FOR ANY QUESTIONS, JUST CONTACT KEY POLYMER  
BEFORE STARTING THE JOB.

17 Shepard Street • Lawrence MA 01843  
1-978-683-9411 • [www.keypolymer.com](http://www.keypolymer.com)

Conditions of Sale:

The recommendations and suggestions for the use of our materials are based on our best experience and knowledge. All products are intended for industrial use only.

Limited Warranty:

Buyer agrees that if the product proves to be defective, Key Polymer's only obligation shall be to replace or refund the purchase price of such product at Key Polymer's option. Key Polymer shall not be liable for any loss or damage, whether direct, incidental or consequential.



KEY FP 100 A/B

TOUGH-SEAL™ TRP

# CrackFiller

A Key Polymer Product

For a complete floor restoration you can apply a KEY FLOOR RESTORE kit to the entire floor to make your floor surface a tough epoxy wood composite. No need for the KEY CRACKFILLER to cure. The FLOOR RESTORE Kit can be applied now in less than an hour.

Durable - Won't Crack or Pop Out

Seals Cracks

Improves Loading Efficiency

Increases Trailer Life

Adds Cargo Protection from Splash-up

Improves Loading Safety

TOUGH-SEAL™ TRP  
THE ORIGINAL  
**FloorRestore®**  
A Key Polymer Product

TOUGH-SEAL™ TRP  
**SmoothMove**  
A Key Polymer Product

KEY CRACKFILLER contains no solvents. However, follow the same good work practices as you would when using paints, finishes or adhesives:




- Avoid contact with skin; wear gloves included with the kit and wash thoroughly after use.
- Wear glasses or goggles; should material contact the eyes, receive medical attention as soon as possible.
- Provide good ventilation.
- Do not smoke or eat while using product.
- Warm soap and water can be used to clean KEY CRACKFILLER from skin.

Do it right! Watch our installation video  
[keypolymer.com](http://keypolymer.com)

## PREPARATION AND TEMP

### Before You Start:

- 1) Store kit at over 65°F - 75°F for at least 24 hours before applying to floor.
- 2) Be sure that the temperature during application and curing will be between 65°F and 85°F. Avoid applying in direct sunlight. TIP: In cold weather using a space heater prior to application of KEY CRACKFILLER will warm the wood and facilitate penetration; after application, the heat will speed up curing time.
- 3) Replace weak or rotted boards and screw down loose ones. KEY CRACKFILLER is an ideal bond between the new boards and the surrounding floor.

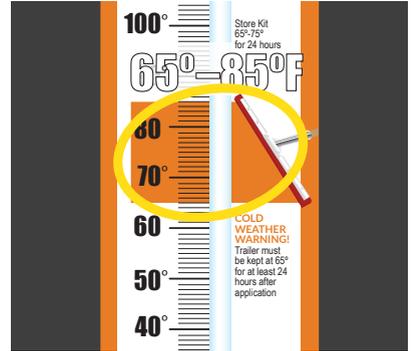

### Preparation:

- 1) Close trailer door and walk through darkened trailer, locating and marking any daylight gaps.
- 2) Locate and mark other damaged places on floor.
- 3) Remove loose material from gouges & cracks in floor, preferably with a vacuum.
- 4) If Key Floor Restore will be applied immediately after Key CrackFiller the entire trailer should be vacuumed. If the floor is oily or greasy, steam clean and allow the floor to dry.

(Key Floor Restore can be applied immediately without waiting for the Key CrackFiller to cure.)



## STEP 1

### Mixing:

- 1) If using full container, add Part B to Part A. The Part A container is partially filled to allow room for mixing.
- 2) If using only part of the container, mix equal amounts of Part A and Part B. Measure - don't eyeball!



## STEP 2

### Application:

- 1) Apply with a putty knife.
- 2) Use within 30 minutes of mixing. If job will take over 30 minutes, mix several batches as needed.
- 3) Clean tools and excess with paint thinner.



## STEP 3

### Curing:

The trailer should be kept at or above 65°F for at least 24 hours after application for proper cure. Avoid curing in direct sunlight on hot days.



TOUGH-SEAL™ TRP  
 THE ORIGINAL  
**FloorRestore®**  
 A Key Polymer Product

TOUGH-SEAL™ TRP  
**SmoothMove**  
 A Key Polymer Product

For a complete floor restoration you can apply a KEY FLOOR RESTORE kit to the entire floor to make your floor surface a tough epoxy wood composite. No need to wait for the KEY CRACKFILLER to cure. The FLOOR RESTORE kit can be applied now in less than an hour.